
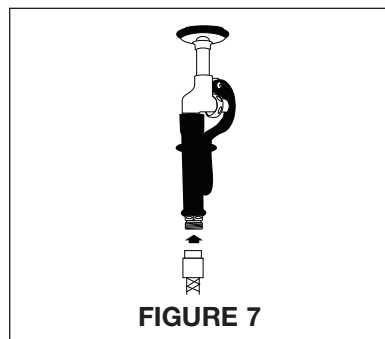




Model LK960AF08C

1. Mount faucet body to wall.
2. Mount add on faucet to faucet body (see Figure 5).
3. Assemble hose to short riser (see Figure 6).
4. Assemble spray to hose (see Figure 7).
5. Attach hook to wall with screws provided.

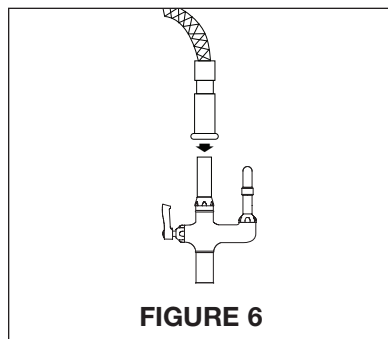

ELKAY®

Installation Instructions for Wall Mount and Deck Mount Pre-rinse Faucets

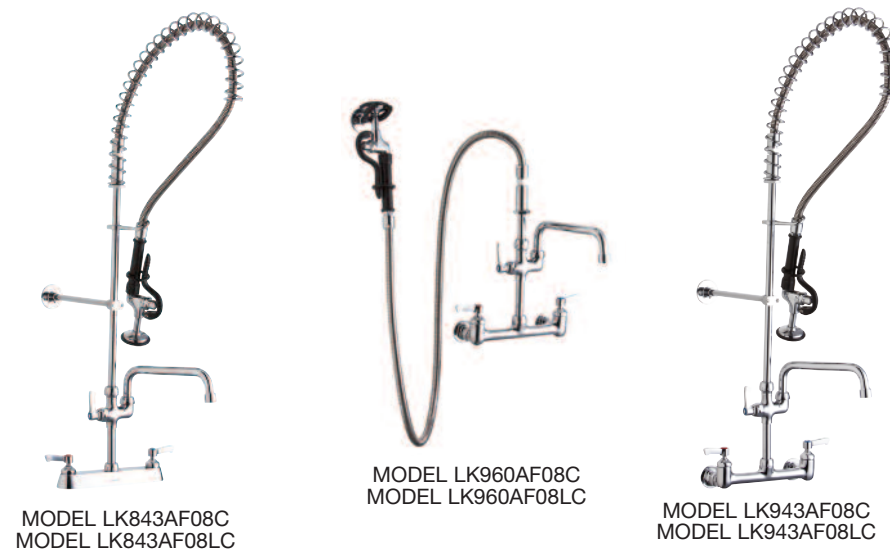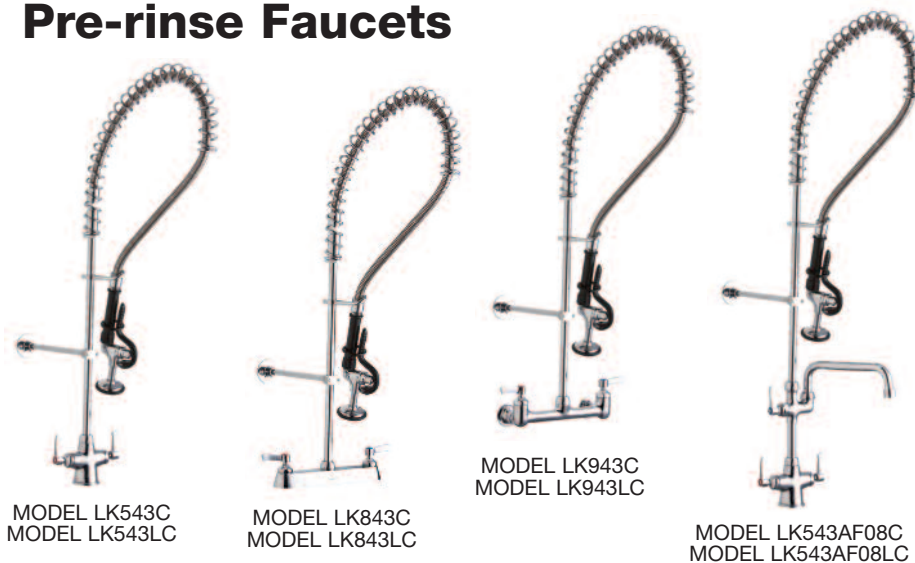

ELKAY®

1333 Butterfield Road, Suite 200 | Downers Grove, IL 60515 | elkay.com
©2025 Elkay Manufacturing Company (3/25) P99365.pdf

SAVE FOR CONSUMER

1333 Butterfield Road, Suite 200 Downers Grove, IL 60515 USA

PRE-RINSE ASSEMBLY

General Instructions

- Turn off the water supply at the main source.
- Hand tighten all parts prior to tightening with wrench. Do not force parts together.
- Handle plated surfaces with care, being careful not to scratch with tools.
- All wall mount faucets have a 1/2" I.P.S. female flanged inlet.
- For easier assembly, you may purchase as an accessory, the LKMK462 mounting kit.



Assemble Faucet Body

Attach faucet body. For back splash mount, apply teflon tape to supply line nipples spring and attach flange fittings.


Attach body to flange fittings.

For deck mount models, place the foam gasket on top of surface and attach the combo nuts below. Tighten to be hand tight.

Assemble Faucet to Flanges

1. Assemble hook to riser (see Figure 1).
2. Attach wall support rod (see Figure 2).
3. Add hose, spring spray and spring retainer as shown in Figure 3.
4. Attach pre-rinse assembly to faucet body (see Figure 4).
5. For models with add on faucet option, insert additional faucet between pre-rinse assembly and faucet body (see Figure 5).

Spread (open) clamp section of Hook so it will slide over Riser without marring finish of Riser. Orient Spray Head Hook with hook up and assemble to Riser. Place approximately one-half down length of Riser. Do not tighten at this time.

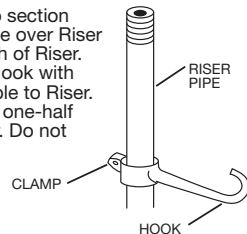

- A. Assemble Spring Retainer to Riser Pipe and tighten with wrench. This will also tighten Riser Pipe on Faucet Body.
- B. Insure O-ring is in place inside of Hose Coupling prior to assembly.

FIGURE 1

