


ACTUAL FRAME MAY VARY  
FROM THE ONE ILLUSTRATED.  
REFER TO YOUR MODEL FOR  
ADDITIONAL INFORMATION.

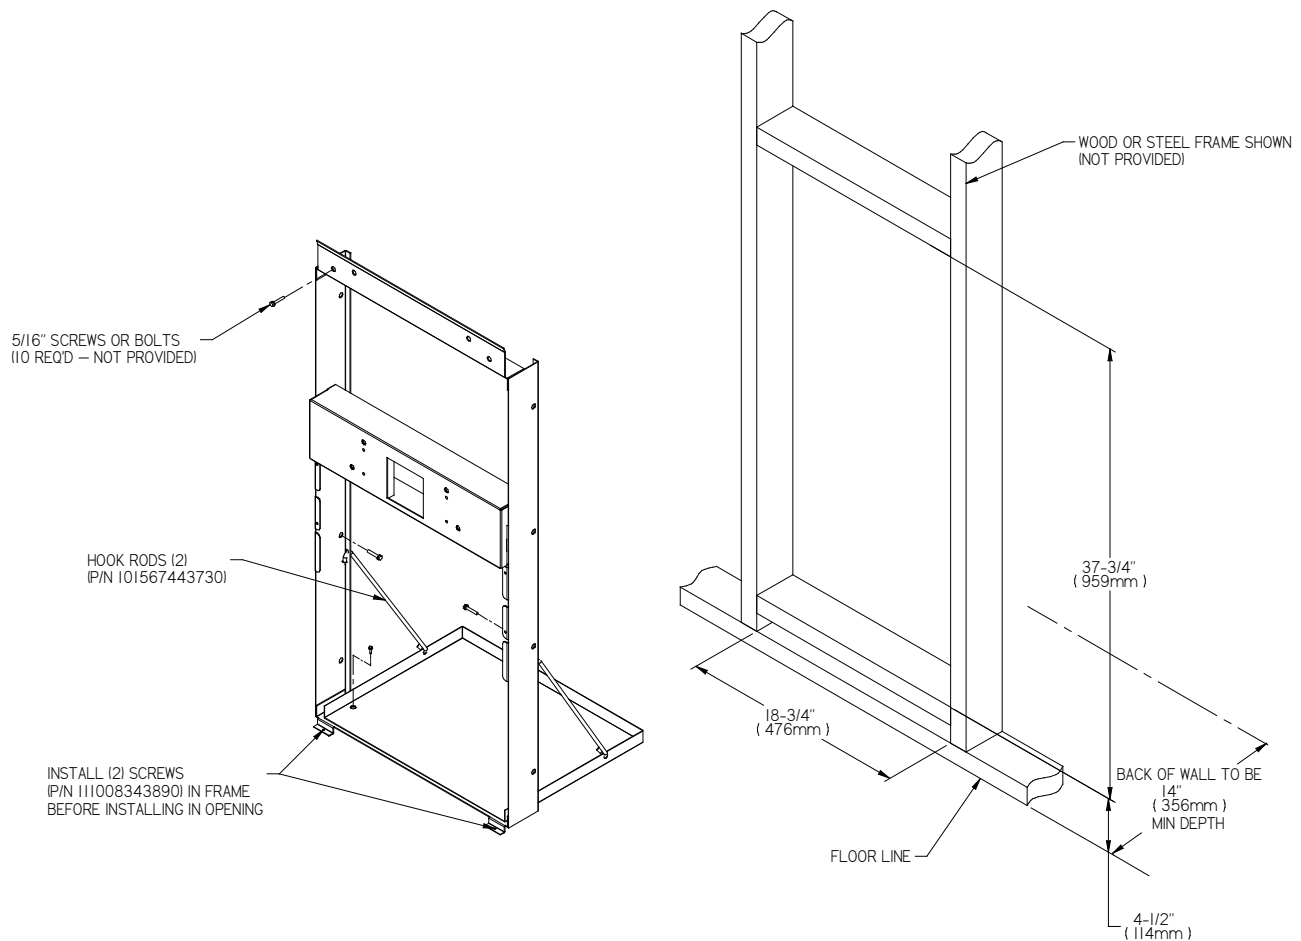

- 1. Cut a square rectangular wall opening** 18-3/4" (476mm) W x 37-3/4" (959mm) H and 4-1/2" (114mm) above the floor line. These dimensions are required to obtain proper rim and bubbler heights for compliance with ANSI A117.1.
- 2. Reinforce the wall opening** on all sides so that it will adequately support the water fountain. This reinforcement must support up to 150lbs (68 kg) static load and provide a means for securing the frame assembly in place. **NOTE: Building construction must allow for adequate air flow on both sides and top of remote chiller unit. Minimum of 4" (102mm) is required.**
- 3. Install plumbing and electrical rough-ins.** A junction box for electrical circuit is provided.
- 4. Remove frame and related hardware from packaging.** Release the two shelf rods by cutting cable ties. Install the frame squarely in wall opening with frame upright edges flush with the finished wall face. Place shelf inside frame and line up the (2) holes on each. Insert loose ends of rods into holes on sides of shelf panel. Using appropriately sized screws or bolts (not provided) fasten the shelf and frame to bottom of wall opening. Secure the frame sides and top to the wall using (10) 5/16" bolts or screws (not provided). **NOTE: Be sure that frame is squared in location. Do not use less than the required screw quantity and size.**